

# Fasteners

## Wood Screw

ThermaFoam R-Control Wood Screws are used to attach ThermaFoam R-Control Nailbase/Nailstrip to wood structural members and substrates.

- Available in standard\* lengths from 3" - 13"

## Metal Screw

ThermaFoam R-Control Metal Screws are used to attach ThermaFoam R-Control Nailbase/Nailstrip to lightweight (up to 18 gauge) steel structural members and substrates.

- Available in standard\* lengths from 3" - 13"

## Concrete Screw

ThermaFoam R-Control Concrete Screws are used to attach ThermaFoam R-Control Nailbase/Nailstrip to all concrete structural members and substrates. ThermaFoam R-Control Concrete Screws are installed into predrilled 3/16" holes.

- Available in standard\* lengths from 3" - 13"

## Fluted Concrete Nail

ThermaFoam R-Control Concrete Nails are used to attach ThermaFoam R-Control Nailbase/Nailstrip to poured concrete structural members and substrates. ThermaFoam R-Control Concrete Nails are installed into predrilled 3/16" holes.

- Available in standard\* lengths from 3" - 8"

 


## FOAM FACTS:

### ThermaFoam R-Control Screws and Fluted Concrete Nails.


- Sit tight to the ThermaFoam R-Control Nailbase/ Nailstrip surface
- Heat treated steel for high strength and durability
- Coated for superior corrosion resistance
- 6 lobe drive design for screws
- Fluted nail design makes for ease of installation and grab

### Wood Screw




Head Style 0.625" Pancake head  
 Drive Style T-30, 6 lobe  
 Thread/Shank Diameter 0.255" / 0.189"  
 Point Style Gimlet Thread

### Concrete Screw

 

Head Style 0.625" Pancake head  
 Drive Style T-30, 6 lobe  
 Thread/Shank Diameter 0.255" / 0.189"  
 Predrill Hole 3/16" masonry bit

### Metal Screw

 

Head Style 0.625" Pancake head  
 Drive Style T-30, 6 lobe  
 Thread/Shank Diameter 0.255" / 0.189"  
 Point Style #2 Drill Point

### Fluted Concrete Nail



Head Style 0.4375" Pancake head  
 Flute/Shank Diameter 0.210" / 0.202"  
 Predrill Hole 3/16" masonry bit

 
### Specifications/Installation

Fasteners as shown on plans and in specifications shall be supplied by the ThermaFoam R-Control.

Use ThermaFoam R-Control screws and/or nails per ThermaFoam R-Control recommended installation guidelines. Refer to ThermaFoam R-Control Construction Manuals and Technical Bulletins showing proper design and applications.

### ThermaFoam R-Control Accessory Availability

ThermaFoam R-Control will be happy to collaborate with you to determine your needs for ThermaFoam R-Control Accessories. For additional information on ThermaFoam R-Control products and to contact your nearest supplier or visit [www.thermafoamrcontrol.com](http://www.thermafoamrcontrol.com).

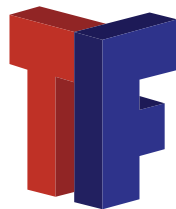

[sales@thermafoamrcontrol.com](mailto:sales@thermafoamrcontrol.com) | [www.thermafoamrcontrol.com](http://www.thermafoamrcontrol.com)



203 South Redmond Road  
 Jacksonville, AR 72076

Office: 501-945-1114